



GET LIFTING WITH THE :MOVE Mini BULLDOZER ADD-ON

BUILD INSTRUCTIONS

Take the :MOVE mini and remove the front ':MOVE' piece, followed by the SERVO:LITE board, and then the interior panels. Screws on the underside will need to be removed for this.



2

NOTE: If not done already, the SERVO:LITE board will need to be converted for use of three servos. Visit kitronik.co.uk/movemini for the online guide.



Slot the servo into the new side panels, connecting the geared part onto the servo shaft. Then secure it with the servo screw and washer.



Using the smaller M2 screws, slot the scoops in between the two arms, and secure in place. Then slot the boot lid under the servo.



7

Place some tape over the inside of each side panel and insert M2 nuts. This will help to keep the nuts secure in the slot for the next step.



NOTE: If you do not have any tape available - you will need to disassemble your :MOVE mini and follow the instructions from the original :MOVE mini manual. Simply replace the two inner side panels with this module you have just built.

Slot the bulldozer module in between the two exterior sides as shown below.

9



Use a screwdriver to tighten the screws and lock the module in place. Once secure, remove the tape.

10

11



Re-attach the three servo cables, and return the SERVO:LITE board back into :MOVE mini.

NOTE: With the back of the board facing you - the third servo attaches to uppermost, right, set of pins.









WARNING : Contents may inspire creativity

- T: 0845 8380781
- W: www.kitronik.co.uk
- E: support@kitronik.co.uk
- in the UK by (Kutronik)





For more information on RoHs and CE please visit kitronik.co.uk/rohs-ce. Children assembling this product should be supervised by a competent adult. The product contains small parts so should be kept out of reach of children under 3 years old.